



Is staying cool an issue?

The patented Power Breezer technology is based on jet propulsion technology and delivers targeted cooling where you need it most – where your people are! The Power Breezer series of mobile products are designed for spot cooling spaces where air conditioning is impractical. Perfect for industrial, manufacturing or outdoor areas, the Power Breezer O2 provides cooling comfort via nature's process in the greenest and most reliable way. This energy-efficient, industrial unit uses the natural process of evaporation with a new spin of our patented atomization process. Water is smashed into micro-droplets resulting in a fine mist that doesn't get you or your equipment wet.

Did you know that heat comes with 4 hidden cost?

1. Productivity Loss—Knocked down by heat—Research has shown that productivity drops by **45% at 95F**
2. Quality Loss— When temperature increases to **90F** there is a **42%** increase in mistakes
3. Safety Loss—When it's hot, injury rate explodes—Injury rate in July and August is **300% higher** than in milder months
4. Turnover and Absenteeism— US Dept. of Labor estimates absenteeism to **increase by 44%** when it's hot

THE WHY

- **Protect your people**—Cools anywhere AC cannot
- **Set it and forget it**—No filters, nozzles or hose connections. One water fill can last days.
- **Atomized water cools** a large area without getting people or equipment wet.
- **Cools in all climates**—Variable fan speed and cooling settings for dry and humid environments

WARM AIR




WARM AIR COLLIDES WITH WATER DROPLETS EVAPORATING THEM

WATER DROPLETS (not to scale)

HEAT ABSORPTION

COOL AIR

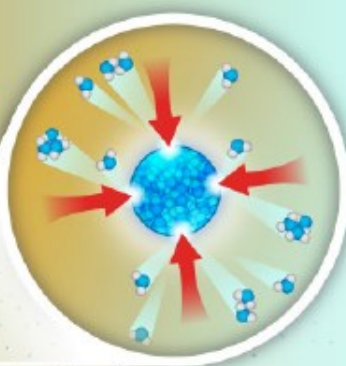

COMPLETE EVAPORATION

Patented jet stream technology puts cold air where you need it.



EVAPORATIVE COOLING WITH UP TO 100 FEET OF REACH (30 METERS)

60° OF OSCILLATION


TECHNICAL SPECIFICATIONS

Part Number	PB10-MAX-06B	PB10-A-06B
Volts	110 V	110 V
Cooling Capacity	65,600 Btu/h	30,800 Btu/h
Wind Range	Up to 100 feet (30 meters)	Up to 65 feet (20 meters)
Air Speed (Miles Per Hour) at Distance	10 Feet – 22 20 Feet – 14 40 Feet – 7	10 Feet – 19 20 Feet – 11 40 Feet – 6
Variable Cooling Control and Oscillation	Yes	Yes
Warranty	2 Year Limited	2 Year Limited



ETL Certified (USA and Canada)
CE Compliant
NOM Certificated

Hierarchy of Controls

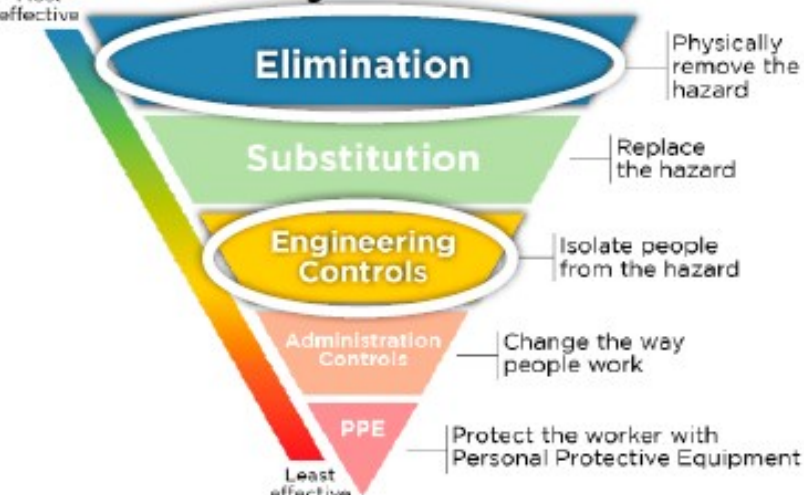

Contact your SSI Representative for all your Cooling Needs!

865-483-9332 or 800-229-7252 | customerservice@scisale.com



Respond to this email to unsubscribe.